



kardiomed[®] 530 stair

User Manual

Contents

Contents.....	2
1 General.....	3
2 Classification of the unit.....	3
3 Safety warnings	3
3.1 Safe assembly of the unit.....	3
3.2 Safe training.....	4
3.3 Indications and contraindications.....	5
4 Operating the display	5
4.1 Pulse systems	5
4.2 Overview Display / Button Functions.....	6
4.3 Display	7
4.4 Quickstart	7
4.5 Programming the monitor.....	7
4.6 Adjusting the resistance.....	7
4.7 DOT Matrix.....	8
4.8 Biofeedback.....	8
4.9 Training Control via the storage media	8
4.10 Online-Training with RFID	9
4.11 Results.....	10
4.12 Programs of the cardio line	10
4.13 Pulse controlled programs	14
4.14 PC-Interface	14
5 Maintenance	15
5.1 Instructions for the error condition detection (failure)	15
5.2 Instructions for preventive maintenance by the operator.....	15
5.3 Maintenance for authorised specialists.....	16
5.4 Performance of the metrological control pursuant Medical Devices Operator Ordinance	16
5.5 Conduction of a safety-related control (According to the transposition of the medical device directive 93/42 EEC into national law)	16
6 Technical data	16
7 Warranty conditions	17

1 General



Read the instruction manual with its security advices and warnings **prior to the initial use** of the units, to secure a safe and conventional use. Keep this document for future reference and pass it with the unit in case of resale.

2 Classification of the unit

- The units of the cardio line med are medical products according to guideline 93/42 EEC, categorized in class IIa. In the control range of the brake, the tolerance is less than 5% or with resistances 50 watts and below less than 3 watts.

The items of the cardio line are consistent with the standard DIN EN ISO 20957 and designed for supervised range.


Only one person at a time can use the unit; the maximum usage weight has to be less than 150 kg. Units with the optional boosted version can be burdened up to 200 kg, see type label and additional instructions.

3 Safety warnings

3.1 Safe assembly of the unit



Fig.1: View of machine with indication of relevant elements

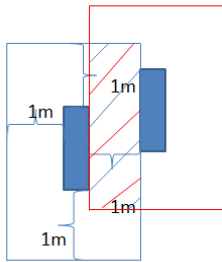

- Place the unit on a solid, flat and non-sliding ground and level the unit with the adjusting feet, so that it does not move.
- For the set-up a safety clearance of 100 cm to all sides is necessary to ensure a safe access also in emergencies. Safety clearances between the devices are allowed to overlap; see picture.
- The usage may only take place in dry rooms (< 65% humidity, > 0 < 45°C room temperature).
- Pay attention that there is no electromagnetic radiation like mobile phones or fluorescent tubes, because they may affect the measurement of the heart rate.
- Do not locate the units on thick rubber mats. Ensure that the unit gets airing from all sides.
- All units of the cardio line are self-powered. The user will either generate the electricity by pedalling or – especially while programming – will be supported by the standard, built-in battery pack. The battery power will last for about two years. See topic “5 Maintenance” for battery change.
- **Attention:** Please consider the standards for care, maintenance and servicing in chapter 5 of this manual.

3.2 Safe training

- Before starting to exercise, the fitness of the user has to be ensured by an authorised specialist or a doctor. Please note topic 3.3 Indications and Contraindications.
- Excessive exercise can be dangerous.
- When nausea or dizziness occurs, the work-out has to be stopped right away and a doctor needs to be allocated.
- The training on the units is allowed with unbruised skin only.
- While exercising light, tight fitting clothing, which cannot be caught in parts of the unit is recommended. Always wear sports shoes to ensure a good balance on the pedals.
- Please check the unit before exercising for a good level, faulty parts or other manipulations. In case of a defect or if you are not sure, ask a supervisor.
- Before the start of the workout it must be assured that no one is close to moving parts, to avoid danger for a third person. Above all, hold unattended children off the units.
- As a safety function, the stop button is always active and immediately slows down the motion when pushed.
- **Warning:** Both pedals will be backtracked to their initial position by a tension spring. To prevent the customer from injuries we recommend to step on and train like described below:
 1. Stand in front of the machine and hold on the handle bars
 2. Step on one pedal with one foot and push down the first pedal
 3. Shift your weight to the side of the pushed down pedal
 4. Push down the second pedal with your other foot
 5. Both pedals are pushed down
 6. Start pedalling by making step climbing movements. Do not bump on both end positions.
 7. If you want to stop training just stop pedalling. Both pedals will slide downwards until they touch the floor.
 8. Now, let one pedal rise to the upright end position.
 9. When the pedal is in the upper position you can step off with the first foot. Afterwards let the second pedal rise into the upright position.
 10. Step off with the second foot.
 11. Please practise to step on and off this machine for a safe training
- The training with the motion stair 600 is a coordinative demanding movement. Additionally this machine can cause a strenuous endurance training. The sinking speed is influenced by the machines level and the user weight.
- **Warning:** The system to control the heart rate can be faulty. Excessive workouts can lead to serious injury or death. When nausea or dizziness occurs, the work-out has to be stopped right away.
- **Warning:** Solely use unit with the casing.
- **Warning if using optional power supply:** Use exclusively medical power supply units according to IEC 60601-1 which are approved by the manufacturer.

3.3 Indications and contraindications

Indications

- Mobility of the locomotors apparatus
- Strengthening of the muscles
- Strengthening of the cardiovascular system

Contraindications

- Cardiovascular affections
- Pains of the locomotors apparatus
- During workout
 - Pains in the thoracic region
 - Nausea
 - Dizziness
 - Pain in the joints involved in the motion

When taking medication ask for a doctor's training advice.

4 Operating the display

Depending on the program version chosen, three or eleven training programs and eventually the optional test programs allow for an individual and diversified training.

4.1 Pulse systems

Every piece of equipment of the cardio line includes the original Polar Pulse System, which receives signals from a breast belt by the exerciser (the breast belt is not included in the delivery of the equipment). The wireless transmission to the electric display is coded. The Polar® technology is based on a magnetic field, which transfers the signals. This magnetic field can be interfered by several sources. The most common reason is the use of breast belts that are not 100% compatible with the Polar®-System and commonly have a longer range. Cell phones, speakers, TVs, power lines, fluorescent tubes, and motors with high power can also interfere with the Polar® Pulse System.


The measuring of the pulse frequency is ECG precise. Only when using coded breast belts, like T31C, the heart rate gets transferred coded. When using an uncoded breast belt, like T31, the transfer is uncoded.

Safety advice according to DIN EN ISO 20957

Warning! Systems for the heart rate surveillance can be faulty. Excessive workouts can lead to serious physical damage or death. Abort the workout immediately when dizziness or nausea occurs.

Ear-pulse (optional)

The ear-pulse-system with the optical measuring at the earlobe is available as an option. If an ear-pulse cable is connected it has priority over Polar® pulse measurement, which will get disconnected. Attention: Rub earlobe thoroughly before applying the ear sensor. To check proper operation of the sensor, switch to the pulse display for surveillance. Therefore press the Scan-button three times while exercising. The indication for the pulse signals has to be high and at regular intervals.



Multi-colour-backlight

All ergometers are equipped with a multicolour backlight for the LCD-Display. The electricity gets provided by the brake. The brightness depends on the current load. Lighting is not possible with really low load because the required power can't get provided safely. The backlight of the ergometer turns on after some seconds in use. Due to the backlight it's easier to read the display, even if lighting conditions are bad.

4.2 Overview Display / Button Functions

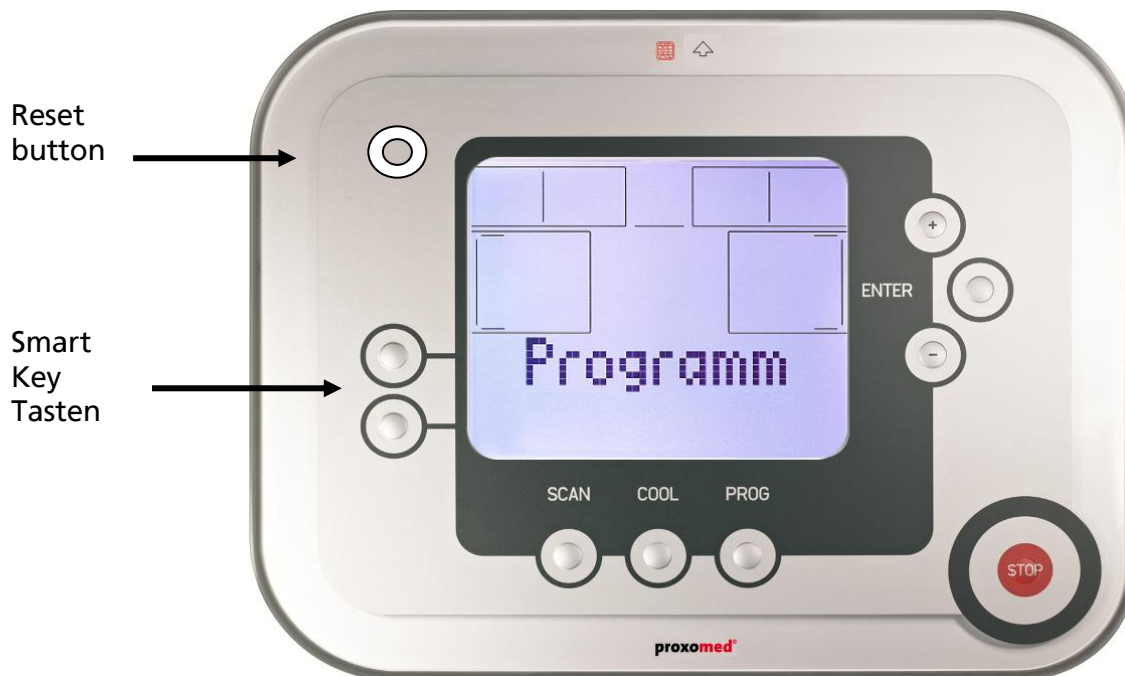


Fig. 2: Monitor view for explanation of button functions

Clockwise explanation of the buttons, starting with the Stop button:

- The **STOP** button stops the workout and activates the electronic brake, which will generate a maximum workload for 8 seconds to bring the movement to a halt. After that, the COOL function can be used to conduct a cool down with low intensity.
- The **PROG** button must be pressed to start the selection of programs available – solely if no storage media is used.
- The **Cool** button stops the workout before the end of the chosen program, begins with the cool down mode and finishes the workout with a low intensity. The workout data is shown and saved on the storage media, if the workout has been started using a storage media.
- The **Scan** button changes the display mode, parameters, or graphical displays within the Dot Matrix on the monitor.
- The **Smart Key** buttons function as shown in the Dot Matrix area of the monitor according to the situational need.
- **Reset button** – Initially, the **Reset** button is not visible for the user. It is hidden in the extension of the smart key buttons at the upper edge of the LCD-display. If the system should operate faulty, the reset button gives you the option to restart the processor. This is only possible if no activity is being conducted on the unit, meaning zero revolutions.
- The **+** button increases value of the parameters.
- By using the **Enter** button, values of parameters or display modes are selected.
- The **-** button decreases the value of the parameters.

4.3 Display

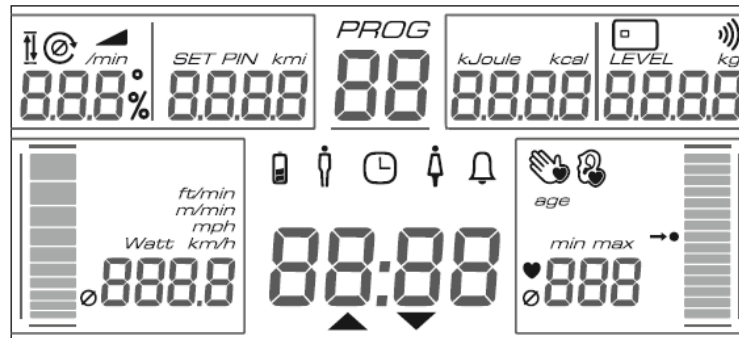


Fig.3: In this image all segments of the LCD display can be seen. In usage only the relevant information is shown.

Depending on the program, the following parameters are shown:

- Program: Number of the program.
- Time: Actual accumulated time of workout or remaining, effective workout time. An arrow indicates the counting direction.
- Pulse: Display of heart frequency, if a measuring device is properly worn/touched. As an indicator that the heart frequency is being measured using the hand pulse system, a symbolized hand is shown. The pulse indicator display makes it visible in which pulse area the trainee is working out. At a pulse of 130, the indicator bar is filled to the middle, indicating reasonable intensity. When training in a pulse controlled program, the centre of the bar indicates the target heart frequency.
- Wattage: The performance is displayed in watts. Corresponding to the digital figures, the intensity is displayed via a graphical bar indicator. The display is calculated by the constant sinking speed and measurement of the users weight.
- m/min: The performance is being shown in m/min. Corresponding to the digital figure, the speed is displayed with a graphical bar indicator.
- Km: Depending on the program, either the accumulated or the remaining distance is being displayed.
- K-Cal: Depending on the program, the accumulated calories burned or the remaining calories to be burned are shown.
- Level: Display of the actual intensity 1-21.
- Storage media: The symbol for the storage media appears whenever a member card is inserted into the slot.
- Ø: If any of the digital figures are shown in combination with this symbol, the figures shown are average figures of the workout session.

4.4 Quickstart

The display can be activated by pedalling, unless the power is already supplied by the battery pack. When starting the workout by pedalling, the quick start program is automatically activated and does not need any menu programming. The resistance can be chosen by pressing the +/- button.

4.5 Programming the monitor

When the button **Prog** is pressed, the programming function becomes activated. By pressing +/-, the desired program can be selected. The name and number of optional programs are being displayed.

Press **ENTER** to confirm the program. Via the menu control, information can be requested to ensure a correct control of the program. The figures displayed can be adjusted by pressing +/- . Every selection must be confirmed with **ENTER**. After all required information has been entered, the program starts automatically and **GO** is being displayed.

4.6 Adjusting the resistance

Except for the fully automated programs (Pulse, Kcal), all program resistances can be manually adjusted by using +/- during the workout. In some programs, this is done via a level system from 4-27, in other programs via selecting the desired level.

4.7 DOT Matrix

In the lower half of the LCD display a text guides through the programming menu in the chosen language in order to ease the programming. Additionally, the wattage and pulse paths are visualized during workouts. The curve for the wattage is displayed constantly whereas the pulse-curve flashes. The display depends on the program but pressing the scan button can alternate the display.

List of graphical display options:

- Standard – shows an excerpt of the last 5 minutes of the workout.
- Overview – shows the complete workout up to 50 minutes
- Figures – super size display of wattage and pulse
- Profile – shows the impact profiles
- Zone – display especially designed for the pulse-dominated programs. Here, the target heart rate is shown together with the actual heart rate
- Test – This option visualizes the pulse movements during the test and shows the heart rate actually reached at the end of the test.
- Pulse – the actual signals are shown like an oscillograph.

4.8 Biofeedback

The Biofeedback function enables the user to get information through a colour indication he is training according to the specifications. The background colour blue informs that one isn't training in the optimal range. It's possible that one is still warming up or training with too little rpm/heart rate.

The background colour green shows that the user is training in the optimal training range.

Red informs that target values are undershot or exceeded. In the pulse controlled workouts the load will get reduced if the target heart rate gets exceeded. In other programs the rpm can be the value that the colours refer to.



Fig.4: Multicolor backlight function for a visual indication of workout target.

4.9 Training Control via the storage media

The storage media has a standard fitting in all units of the cardio line. Workout control via the storage media is a means of easing the handling of the unit. The storage media system supports the user in all aspects of training activities.

The system consists of a monitor unit with the storage media reader. The slot used to enter the media is located on the right side of the monitor casing. An acoustical signal proves the acceptance of the storage media. The storage media system makes training with all units of the cardio line easier and more efficient. The programming of the media can be done directly on the ergometer. The results will then only be shown in the unit display.

The planning of training can alternatively be done with PC Software. If the software is used, the individual training programs are transferred to the storage media. All results are saved on the storage media and can be analysed on the PC after the results have been transferred.

Optionally the usage of the unit can get restricted to storage media use only. This function can get chosen in the secret menu with the following alternatives: Usage solely with storage media; if not using a storage media solely the Quick Start program is possible; usage with and without storage media possible. The default value is using the machine with and without storage media. Please contact your dealer for necessary settings in case you want to restrict the usage of the machines.

Programming Training Schedules manually onto the member media

- One must get onto the ergometer and begin pedalling or activate the display by pressing any button.
- The individual data for the desired program has to be entered manually on the monitor. The program then starts.
- The trainer media is entered into the slot once the display shows GO until an acoustical signal indicates that the media has been recognized.
- The member media gets inserted. Now the maximum number of workouts (1-255) can get chosen. Confirm with ENTER. When the acoustic signal rings out, the data has been saved and the member card is functioning. Selecting 255 workouts equals no limit.

- Reinsert the member card. The training can start now. If the maximum number of workouts is fulfilled a new program has to get stored on the card.

The member card should be used by one training person only. After the desired program has been saved, the card simply has to be entered to start the workout. The workout is controlled automatically and no further programming is necessary. All workout results are saved automatically as average or accumulated values on the storage media after each workout.

Special functions of the trainer card: Deleting the data on member media

If you want to delete all data of a medium, then you have to insert the trainer medium twice. Afterwards you insert the member card. Then the monitor will indicate "delete card". If you insert the member card afterwards the display will show "card expired."

If the member card is inserted in the monitor the results can get deleted without deleting the training program. The "Results total" can be deleted by pushing the buttons + and - (3 seconds) at the same time. Solely the results will get deleted, not the training plan.

Functioning of the member medium

The trainee must get onto the ergometer and begin pedalling. Next, the storage media has to be entered into the slot. The accumulated/average results of previous workouts on all types of ergometers and for the type used at the moment are shown for four seconds each.

After that, the personal workout that was previously saved on the storage media is being started automatically and the workout session can begin. The storage media can be removed **after** the workout is over or interrupted by pressing the **COOL** button.

The results of the actual session are displayed on the monitor and saved onto the storage media immediately after the end of the workout.

4.10 Online-Training with RFID

As an option the units can get equipped with a RFID reader (Mifare, Hitag, Legic – Attention: Please take care of the proper specifications when ordering. Solely with the right reader the compatibility will be given). The online-version gets controlled with a compatible PC-Software.

To start the training one has to press the RFID-button. Then the wristband has to get hold over the RFID-button. The training can start. Go is shown in the display.

Using a media other than a RFID-wristband has to be announced before production of the units as special settings will be needed.

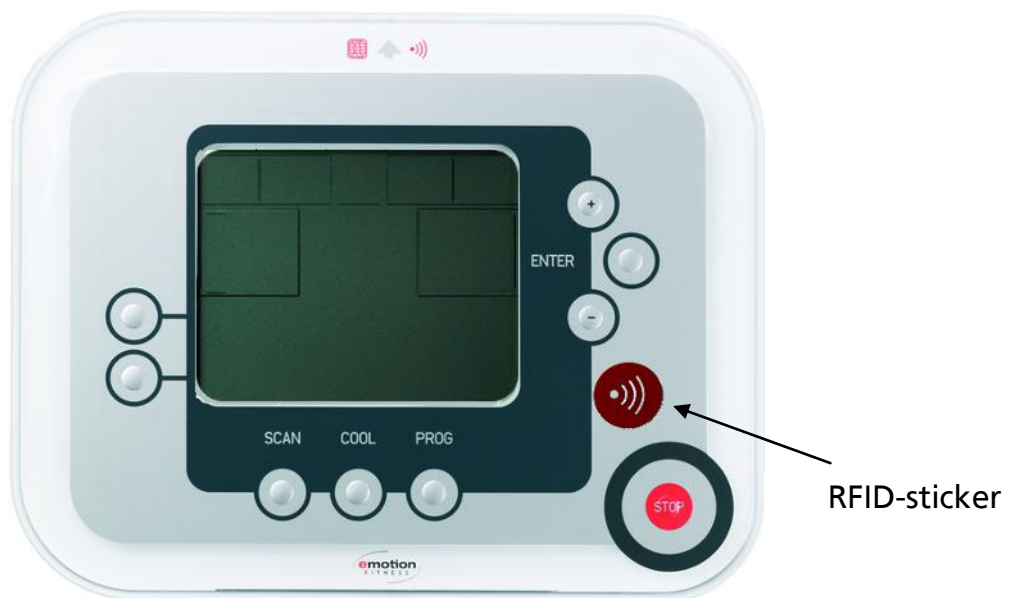


Fig. 5: RFID-button for RFID identification, in case the medium cannot be read via the slot

If the message "insert again" is shown several times in a row, press the SCAN-button to display a more specific error message.

4.11 Results

After the end of each workout or after pressing the **COOL** button, all workout results will be shown on the display. According to the program selected, the relevant results are shown. When there is no reaction the workout will be stopped after showing the results. By pushing the COOL button, the workout can be stopped at any time.

The results are shown in the parameter area as well as in the dot matrix section. Some figures are average values (wattage, km/h, rpm, pulse, and meters), some are accumulated values (km, k-cal, time). Average values are marked with the Ø symbol. This enables the control of personal fitness-development and thereby motivates a frequent user.

If the training has been conducted using a storage media, the training results from every type of ergometer are saved separately onto the storage media. The analysis of the results saved can be done at the ergometer directly or on a PC if the required software is available.

4.12 Programs of the cardio line

Programs	Kardiomed stair 530			
Possibilities of usage	Manual selection	Storage media	Controlling via PC	Biofeedback general (except for treadmill)
1 Quick	X	X	X	-
2 Watt	X	X	X	-
3 Watt sensitive*	X	X	X	X
4 Pulse	X	X	X	X
5 Isokinetik*	-	-	-	-
6 Therapy*	X	X	X	X
7 Interval*	X	X	-	-
8 K-cal*	X	X	X	X
9 Hill*	X	X	X	-
10 Random*	X	-	-	-
11 Distance*	X	X	X	-

Tab.1: Programs of the cardio line med separated by units, usage and biofeedback (programs which are part of an optional program package are indicated by a*).

Program specifications

Quick

The quick start program allows an immediate workout start. The trainee simply has to begin pedalling, and the display starts operating. No programming is required.

Using the +/- buttons, the level (degree of intensity) can be varied at all times.

The program works in an rpm-dependent mode, which means that the intensity varies according to rpm.

Using the **Scan** button, the figures and the graphical displays vary.

Pressing the **COOL** button will initiate a display of the results as well as concludes the program.

Watt

The program exclusively manages the endurance of the workout and works rpm-independently, which means the output stays constant, when varying the rpm.

The remaining time is permanently shown in the display. After the end of the workout or after the cancelling with the **COOL** button, the relevant results are being shown in the display.

Pulse

The pulse training option is an intelligent training program that ensures a workout intensity that is optimal for reaching training goals without the need of manual interference. The desired target heart rate (depending on the desired training aim) must be entered at the beginning of the workout. The ergometer then adjusts the resistance to the actual heart rate in a manner that allows the target heart rate zone to be reached, but not

exceeded. Additionally, the program can evaluate the development of the heart rate and use the determined fitness level to adjust the resistance, which allows for an optimal warm-up.

If the initial resistance is set above a certain limit, no warm-up will be done and the resistance is immediately being adjusted to the desired heart frequency (see motion pulse manager brochure). This program functions in the rpm-independent mode.

The pulse program requires three figures to work properly:

- Desired heart frequency during the workout
- Initial intensity in watts;
- Training time in the effective heart rate range

Everything else is managed by the program control. The time entered is the time of workout in the effective heart rate range, which means that the time of the warm-up will not be counted.

The +/- buttons are always active during the workout. If the initial intensity is increased to more than 45 watts during the first two minutes of the workout, the program control will increase the intensity immediately to reach the target heart rate as quickly as possible. By doing so, the user can perform a so called cross training, whereby the resistance is adjusted to the expected wattage during the workout and the ergometer will simply make fine tunings to the resistance.

In this program the biofeedback function is active to give the trainer and the user a visual feedback when undercutting or over-exceeding the target heart rate.

Once the target heart rate has been reached, the +/- buttons can be used to change the target heart rate.

At the conclusion of the training, the results are shown on the display.

K-cal

The K-cal training has been designed to meet the needs of gyms and gym members who are interested in stamina workouts to reduce body weight. To ensure that the workout stresses the desired metabolism, the program controls the resistance according to the pre-adjusted heart frequency. Personal performance influences the workout time needed to burn a certain amount of calories at a constant heart rate.

In this program the biofeedback function is active to give the trainer and the user a visual feedback when undercutting or over-exceeding the target heart rate.

At the end of the training, the results are shown in the display.

Hill

The hill training program operates in an rpm-dependent mode and combines constant aerobic and slightly anaerobic interval workouts. The desired workout time and the level of intensity must be set during programming. During the entire workout, the +/- buttons remain active to allow for a change in resistance.

The graphical profile indicates the hill profile remaining and the actual position during the workout. The intensity will be shown permanently as level or as wattage/speed.

The heart frequency is shown if the trainee is using one of the given heart measurement devices. This serves as a personal control but does not have an influence on the program itself.

After completing the program, the cool down starts automatically and a display of the results is initiated.

Random

The random training offers various training profiles. It operates rpm-dependently and combines constant aerobic and slightly anaerobic interval workouts. The desired workout time and the level of intensity must be set during programming. During the entire workout, the +/- remain activated to allow for a change in resistance.

The graphical profile indicates the hill profile remaining and the actual position during the workout. The intensity will be shown permanently as level or as wattage/speed.

The heart frequency is shown if the trainee is using one of the given heart measurement devices. This serves as a personal control but does not have an influence on the program itself.

After completing the program, the cool down starts automatically and a display of the results is initiated. This program cannot be controlled via the storage media.






Interval

The interval training works rpm independently. Programming with a PC-software is not possible at this point. The training can be divided into 22 parts, which can get set individually regarding intensity, time and other parameters. To use this individually set training program easily, it can get saved on a storage media. In general intensity steps are put in a row. If a different intensity is to follow the previous step, the wattage gets adapted slowly. It's also possible to increase the wattage like a ramp. In this case the increasing of the load gets adapted constantly over the full time period of that step.

To simplify the process of programming you can repeat a load- and pulse sequence as often as you want – e.g. "Loop" x 5 – (max. 22 x). A side effect is a reduced amount of data on the storage media on which other training programs from other types of units can be stored.


In the top right corner of the display the remaining number of steps possible is being indicated. It gets counted backwards from 22. If more than 22 steps are set solely the first 22 will get stored on the storage media.

The following symbols are shown in the display and are relevant for the programming.

				
Loop indicator shows that you want to multiply an interval sequence.	With this symbol you start and end the programming of an interval sequence.	Stepless load increase through the time of the sequence.	Increasing steps by	Finish of the interval programming.

symbol	request of setting	range of values	action of setting
			Activate monitor by pedalling or pressing a button
	Press Prog. Button		
	Choose program with +/-	Interval	→ ENTER




Programming of a sequence

	Choose step or ramp mode		Choose with SCAN
	Watts	4 - 27	Choose with +/-, → ENTER
	RPM	40 - 120	Choose with +/-, → ENTER
	Duration	10sek.- 40min	Choose with +/-, → ENTER


Choose step or ramp mode



Or

You want to multiply the sequence

	Choose with SCAN, Symbol  appears,		
	Step or ramp mode		choose with SCAN
	Watts	4 - 27	Choose with +/-, → ENTER
	RPM	40 - 120	Choose with +/-, → ENTER
	Duration	10sek.- 40min	Choose with +/-, → ENTER


Step is defined, next step follows

	Choose step or ramp mode		Choose with SCAN
	Watts	4 - 27	Choose with +/-, → ENTER
	RPM	40 - 120	Choose with +/-, → ENTER
	Duration	10sek.- 40min	Choose with +/-, → ENTER

	If you want to repeat the last two steps, choose LOOP and enter the amount of repetitions.		
	The  Symbol disappears		

A sequence with two steps was programmed.

Now single steps or sequences can get programmed.

	If you want to finish programming, activate the Stop symbol with the scan button and confirm with Enter, otherwise you can program the next step, etc.		
	Are you sure?		Confirm with ENTER

Entering of personal parameters to calculate the maximum heart rate

Formula: $220 - \text{age} = \text{max. heart rate}$			
	Age	15 - 90	Choose with +/-, → ENTER
	Max. pulse	90 - 220	Choose with +/-, → ENTER
	The programming of the intervals is completed. The display says GO.		

To store the program on the storage media do the following steps			
	Insert trainer card and take it out again		
	Insert member card		
	Amount of trainings	1 - 255	Choose with +/-, → ENTER
	Entering 255 trainings means that it is unlimited; the stored program can get used as often as wanted. You usually use this when the card doesn't get used by an individual. In this case you can ignore the results.		
The display showswriting Program.... for some seconds. The program is now stored on the media.			
The storage media can now be used. After inserting the results are displayed and the interval program starts.			
With +/- the intensity of every step can get adapted			
With the SCAN button different display views can get chosen. Profile Rpm Pulse Diagram watts-pulse			
By pressing COOL you can stop the training and the results will be stored.			

Distance

The distance training works in a rpm-dependent mode, which means that the intensity adjusts when the rpm changes. For this program, the parameters distance and intensity level/gear (1-21) must be pre-selected. At any time during the workout, the level can be adjusted with +/- . The chosen distance will countdown and the intensity is determined from among the 21 intensity levels. The workload is shown in km/h in the display. The time that is needed to complete the distance can be used as an indicator of performance.

After completing the program, a display of the results is initiated.

Watt sensitive

Watt constant training programs are likely to be used in the field of training control and therapy, because the intensity control can be very accurate. As long as there are no orthopaedic reasons for therapy, the rpm-independent power control of ergometers has a lot of advantages.

However, if problems in the extremities used exist, the rpm-independent power control can lead to overstress. A reduction of the rpm increases the pedal impact a lot and can lead to overstress or program abort.

To eliminate these negative aspects, excessive torsion can be avoided in the watt sensitive program by an intelligent program control. During the program setting, a rpm limit gets selected. When the limit gets undercut the pedal resistance gets redeemed immediately.

Also the overshoot of the limited heart rate gets controlled. When it gets overshoot for a longer time, a watt reduction of 10% every 30 seconds is the result (see motion pulse manager brochure).

The target resistance will be reached via a ramp during the first 2 minutes. That way the trainee gets used to the power and an adequate warm-up is assured.

The biofeedback function is in this program active and gives feedback according to the target rpm.

Therapy

Also in rehabilitation the total intensity of the training gets controlled with the intensity steering factors workout time as well as intensity, alongside the recovery progress. As a general rule intensity changes occur by increasing the workload (e.g. increasing of the wattage). At the therapy training the intensity gets varied several times within the program. After a two minute warm-up in ramp shape, 6 intervals of one minute each, with one minute active rest (50% of the impact intensity) per interval follow.

The maximum interval impact in watt gets limited as well as the rpm limit below which the pedal power gets clearly decreased. Also the overshooting of the pre-entered heart rate gets controlled. When overshooting for a longer time a reduction of the wattage of 10% every 30 seconds follows (see motion pulse manager brochure).

A Cool Down function over 3 minutes rounds up the training. Overall the program lasts 17 minutes.

The biofeedback function is also active in this program and gives feedback according to the target rpm.

4.13 Pulse controlled programs

Concerning the working of pulse controlled programs such as pulse program, Kcal training, Watt sensitive and Therapy, please refer to the brochure "motion pulse manager".

4.14 PC-Interface

All ergometers are equipped standardly with an RS232 interface. This interface is not equipped with a galvanic isolation or external power supply. By this the ergometer can be controlled via a PC, an ECG, spiroergometry device, also, if both devices are using the same interface protocol. Please note, that with medical use, the rules for electric safety must be obeyed. Optionally, a RS232 interface with galvanic isolation can be ordered (when the machine is being build), in order to limit the risk resulting from any malfunction of the connected device. Please contact your dealer, when you have more questions about this issue.

If the monitor shall be active for a longer period – especially prior to the start of a training/test – a stabilized, medically approved, 9 Volt power supply unit has to be connected. This is not included in the standard RS232 setting.

After connecting the power supply, the display is being activated for 3 Minutes and then goes into standby. With the next push of a button, it is ready instantly.

5 Maintenance

All cardio machines from emotion fitness are characterized by excellent quality. The units are durable and only need little maintenance, to function over a long period of time. The required maintenance has to be conducted conscientiously.

Warning: Only authorised service is allowed to open the unit.

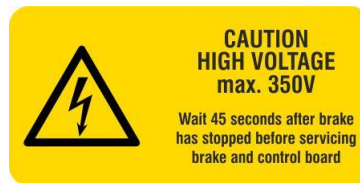


Abb.6: Warning indication at brake: Danger resulting from high voltage

You can only keep the safety level by checking the unit regularly for damage and attrition. Damaged parts need to be replaced right away and the unit needs to be decommissioned until its repair.

5.1 Instructions for the error condition detection (failure)

In case failure occurs at a machine that you cannot classify, please contact emotion fitness GmbH & Co. KG. For every error report please hold ready the serial number and model type of the faulty machine. It can be important to diagnose properly and to provide the correct spare parts!

5.2 Instructions for preventive maintenance by the operator

Check the unit visually before every usage but at least daily particularly for damaged parts, loose connections and atypical noises.

Despite an excellent quality management system the unit has to be inspected intensely every six months. Document the inspection for medical machines in the medical booklet:

- Check all connections and welding seams.
- Clean the unit well.
- Check all screws for tightness.
- Check the saddle and saddle pole for damages. Beware to exchange the saddle every 2 years to prevent fatigue of the material.
- Check the cranks and pedals for damages and tightness.

In general:

- Clean the devices with mild purifier and a wet cloth to get off aggressive sweat. Dry the device afterwards.
- The usage of spray bottles is not allowed; it has shown that the unit never dries at spots that can't be reached. Rust may occur.
- Pay attention that no liquids run into the monitor as it could destroy parts of the electronic.
- If disinfection is required only use acryl-des® disinfection cloths (see <http://www.schuelke.com/>).
- The monitor is showing the sign for low battery voltage when the function without electricity from the brake can't be guaranteed. Exchange the three AA batteries by removing the four screws of the monitor casing and take away the front carefully. Please pay attention that you put the batteries in the right way, note the signing. Dispose the batteries according to the provisions. There is a return obligation; the customer can choose if he wants to give the batteries to the local disposer or to the distributor free of charge.
- Beware to not put the machines on thick rubber mats where the frame gets pushed in. The bottom of the frame needs to be ventilated.
- Check the casing for tightness.
- Check the locking pins for proper function.
- When using the machine regularly please check the unit parts visually, especially screws, bolts, welding seams and other fixtures.
- Check the tightness of the unit feet.
- Check if the cranks are mounted tight to the axle. Therefore you need a 14 mm socket wrench.
- Important: Retighten the cranks after 10 hours of use! Damages on the cranks or axle due to a lack of retightening are not considered a warranty case!
- Check the seat post for damages due to overload.

- Clean the parts of the seat post and seat sleigh with silicone spray and wipe it dry afterwards.
- Check the pedal straps for damages.
- Only use original spare parts, therefore please contact us.

Warning: Retorque cranks and pedals

After the first 10 hours of use the cranks and pedals need to get re-tightened.

If they don't get retightened, damage of the axle, pedals or cranks is possible and the warranty doesn't cover the damage.

5.3 Maintenance for authorised specialists

According to the transposition of the medical device directive 93/42 EEC into national law, emotion fitness calls for a maintenance check with examination of all relevant component parts by an authorized employee/partner. This maintenance check needs to be conducted **every 12 months** on all medical devices of emotion fitness. For all necessitated control steps please also consider your countries local requirements.

5.4 Performance of the metrological control pursuant Medical Devices Operator Ordinance

Medical products have to undergo a technical measurement check every **24 months**. The date of the next control is shown on the control badge, which you will find next to the type plate.

The possible calibration in the course of the technical measurement check can only get performed by an authorised company or professional. Contact your dealer in case you need a reference.

5.5 Conduction of a safety-related control (According to the transposition of the medical device directive 93/42 EEC into national law)

At elliptical- and stairclimbing machines (cross and stair) Metrological Controls are not required by the legislature as the users body weight does have a significant influence on the resulting power. On request emotion fitness offers to calibrate the brake output.

The conduction of the Maintenance, Safety-Related Controls and Metrological Controls is in the sole responsibility of the operator!

§ 2 subparagraph 2: This law also applies to the use, operation and maintaining of products that have not been placed on the market as a medical device but are being used with the intended purpose of a medical device as described in the national laws resulting from medical device directive 93/42EEC.

They are regarded as medical devices in terms of the medical device guideline.

6 Technical data

- The information about measurements and weight can vary because of technical changes and optional features

measurements	Weight	Max. user weight
105 cm x 60 cm x 145 cm (L/B/H)	65 kg	150 kg; boosted: 200 kg

- System of resistance: self-powered brake without the external power supply
- buffer battery: 3 x AA/ Ro3/ UM4 – mignon cell
- range of performance medical: 4-27 m/min sinking speed
- freewheel: existing
- Following EU-guidelines are fulfilled:
DIN EN ISO 20957-1 S-A-I
DIN EN ISO 20957-5 S-A-I
DIN EN 60601-1:2013
2001/95/EG general product safety guideline
93/42/EWG medical guideline

7 Warranty conditions

The following is based on the legal warranty.

As a distributor, Proxomed Medizintechnik GmbH provides cost free service for professional users such as fitness gyms for up to two years on parts and one year for working hours. This offer applies only if proper use and maintenance as described in this manual can be proven.

The warranty is terminated as soon as the product is serviced or repaired by an unauthorised person. If a warranty case occurs, proxomed Medizintechnik GmbH must be informed immediately in written form or e-mail. The owner must provide information including the serial number, detailed error report, the date of purchase, and the name of the original supplier.

proxomed Medizintechnik GmbH will initiate service, but reserves the right to decide about the mode of service.

The following procedures are possible:

1. The service is conducted on-site by our service employees.
2. The required spare part(s) are shipped.
3. An exchange unit is arranged and sent to the user.


The defective parts must be sent to proxomed within 48 hours. Otherwise the cost for spare parts that have been delivered will be charged.

If causes for repairs lie outside of the warranty conditions, proxomed Medizintechnik GmbH reserves the right to require payment for all costs of the repair.

Some consumable parts are excluded from the warranty. These include the overlay, seat, crank arms, crank arm fixings, pedals, pedal straps, storage batteries, footsteps and the foam covering for the handrails. The Polar® pulse systems are covered by the legal guarantee.

These warranty conditions do not in any way interfere with general legal claims.

Our General Conditions of Export can be seen and downloaded in the latest version on our webpage www.proxomed.com.

Manufacturer according to MPG  0633
emotion fitness GmbH & Co KG
Trippstadter Str. 68
67691 Hochspeyer
Telefon: +49 (0)6305-71499-0
Telefax: +49 (0)6305-71499-111
E-Mail: info@emotion-fitness.de

Exclusive sales of the proxomed® kardiomed 530 units

proxomed® Medizintechnik GmbH
Daimlerstraße 6
63755 Alzenau
Telefon : +49 (0)6023 9168-0
Telefax : +49 (0)6023 916868

Internet : www.proxomed.de
E-mail : info@proxomed.com

German headquarters:

proxomed® Medizintechnik GmbH

Daimlerstraße 6

D-63755 Alzenau

Tel.: +49 6023 9168-0

Fax: +49 6023 9168-68

www.proxomed.de

info@proxomed.de

Office Switzerland:

proxomed® Medizintechnik

Seestrasse 161

CH-8266 Steckborn

Tel.: +41 52762 1300

Fax: +41 52762 1470

www.proxomed.de

info@proxomed.ch

Changes:

proxomed® reserves the right to change any product if this action, in our opinion, leads to improved quality and functionality. All images in these operating instructions are - due to printing - only similar. We take no responsibility for printing errors. Errors and omissions excepted.

User Manual kardiomed® 530 Stair,
valid since: Aug. 2017

10324100, kardiomed 530 Stair up to 150 kg user weight
10324300; kardiomed 530 Stair up to 200 kg user weight ⁽¹⁾

⁽¹⁾ see additional user manual kardiomed 530® boosted!

emotion fitness GmbH & Co KG is a
company certified by the Berlin Cert GmbH

CE 0633



proxomed® is a company certified by the
TÜV SÜD Product Service GmbH.